Ball Check Valve Locations

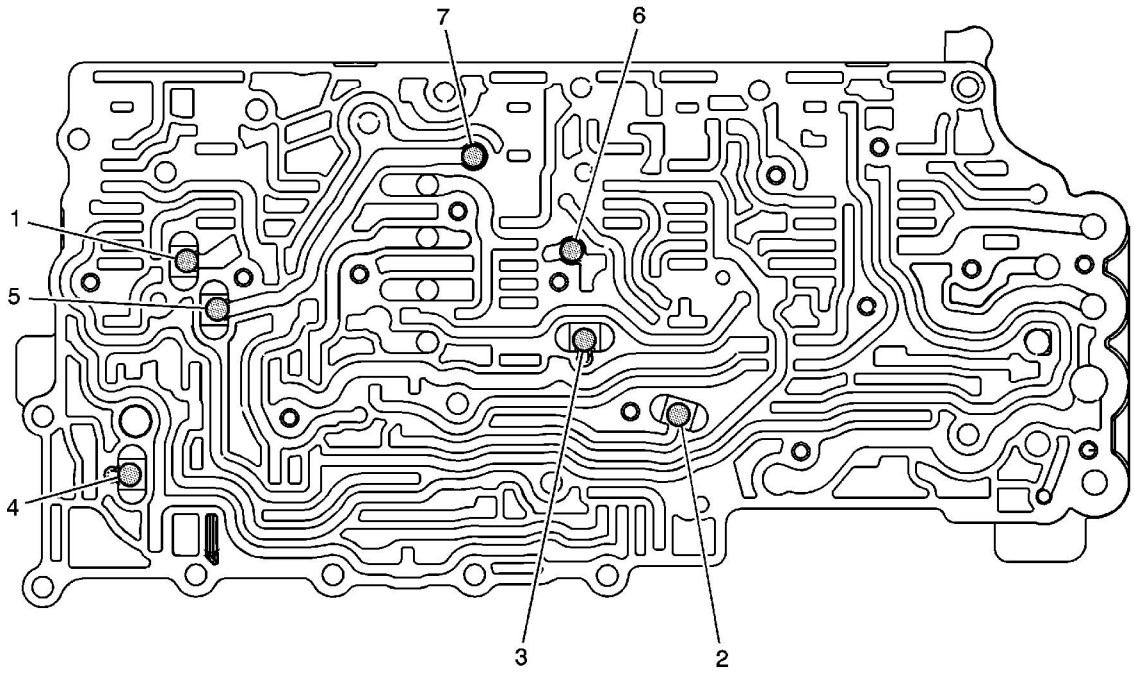

I.D.	Input Oil	Input Oil	Output Oil
1	Drive 1-6	DRV B	CB26/C1234 FD
2	Sol 1	Reverse (Park)	CSV2 Enable
3	Sol 2	C456	CSV3 Enable
4	PS4	C456	CSV2 Latch
5	Drive 1-6	C35R Rev FD	C35R Supply
6	CB26/C1234 FD	--	C1234 FD
7	C35R Supply	--	C35R FD

© 2010 General Motors Corporation. All rights reserved.

Bushing, Bearing, and Washer Locations

Bushing, Bearing and Washer Locations

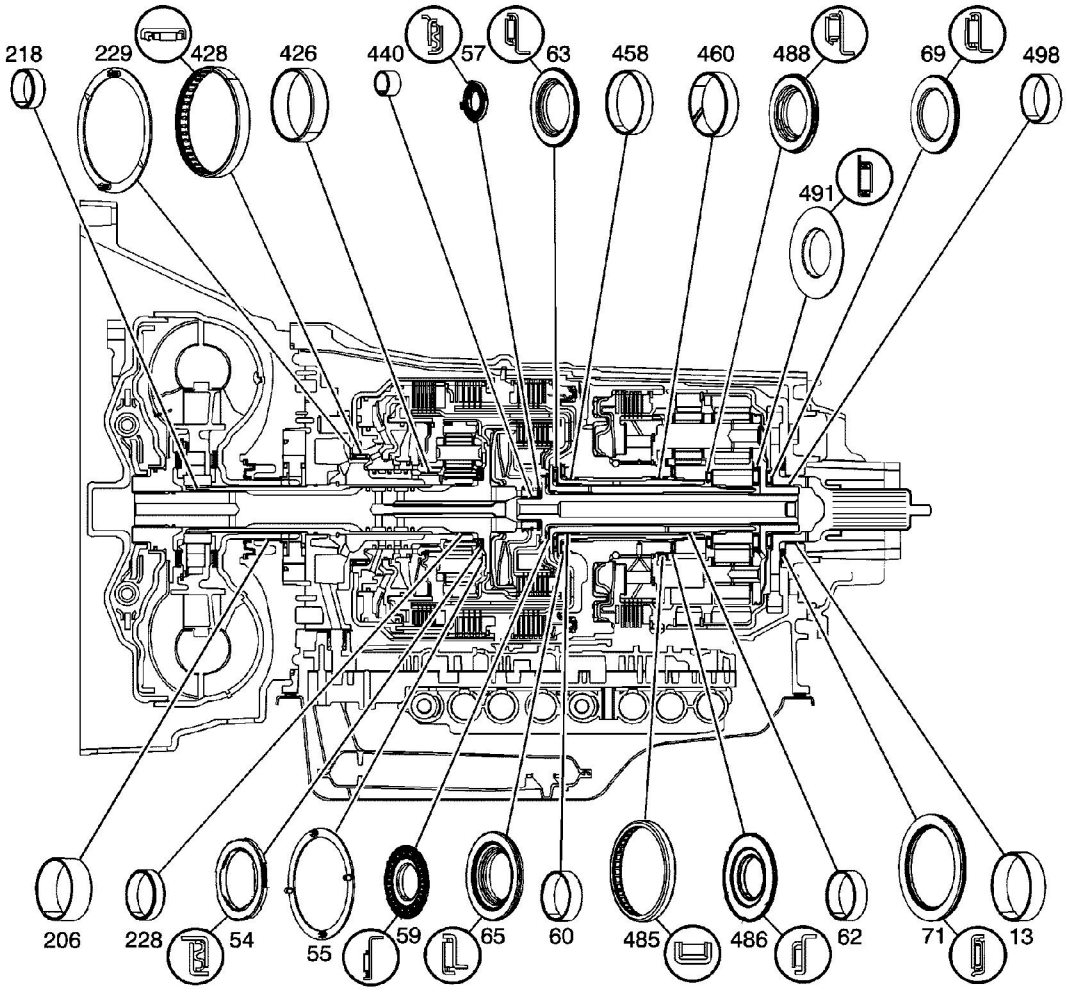

(13) Output Shaft Bushing
(54) Input Sun Gear Thrust Bearing
(55) Input Sun Gear Thrust Washer
(57) Turbine Shaft Thrust Bearing Assembly
(59) 4-5-6 Clutch Hub Thrust Bearing Assembly
(60) Output Carrier Inner Sun Gear Shaft (Front) Bushing
(62) Output Carrier Inner Sun Gear Shaft Bushing
(63) 1-2-3-4 Clutch Hub Thrust Bearing Assembly
(65) 2-6 and 3-5 Reverse Clutch Hub Thrust Bearing Assembly
(69) Output Carrier Thrust Bearing Assembly

© 2010 General Motors Corporation. All rights reserved.

(71) Output Shaft Thrust Bearing Assembly
(206) Torque Converter Bushing
(218) Turbine Shaft Front Bushing
(228) Turbine Shaft Rear Bushing
(229) 1-2-3-4 and 3-5 Reverse Clutch Housing Thrust Washer
(426) 1-2-3-4 and 3-5 Reverse Clutch Housing Rear Bushing
(428) 1-2-3-4 and 3-5 Reverse Clutch Bearing Assembly
(440) Output Carrier Shaft Housing Bushing
(458) Output Carrier Outer Sun Gear Shaft (Front) Bushing
(460) Output Carrier Outer Sun Gear Shaft Rear Bushing
(485) Centre Support Roller Bearing Assembly
(486) Output Carrier Front Sun Gear Thrust Bearing Assembly
(488) Output Carrier Front Sun Gear Rear Thrust Bearing Assembly
(491) Output Carrier Rear Sun Gear Thrust Bearing - Captured
(498) Output Carrier Bushing

Component Location

Component Locations

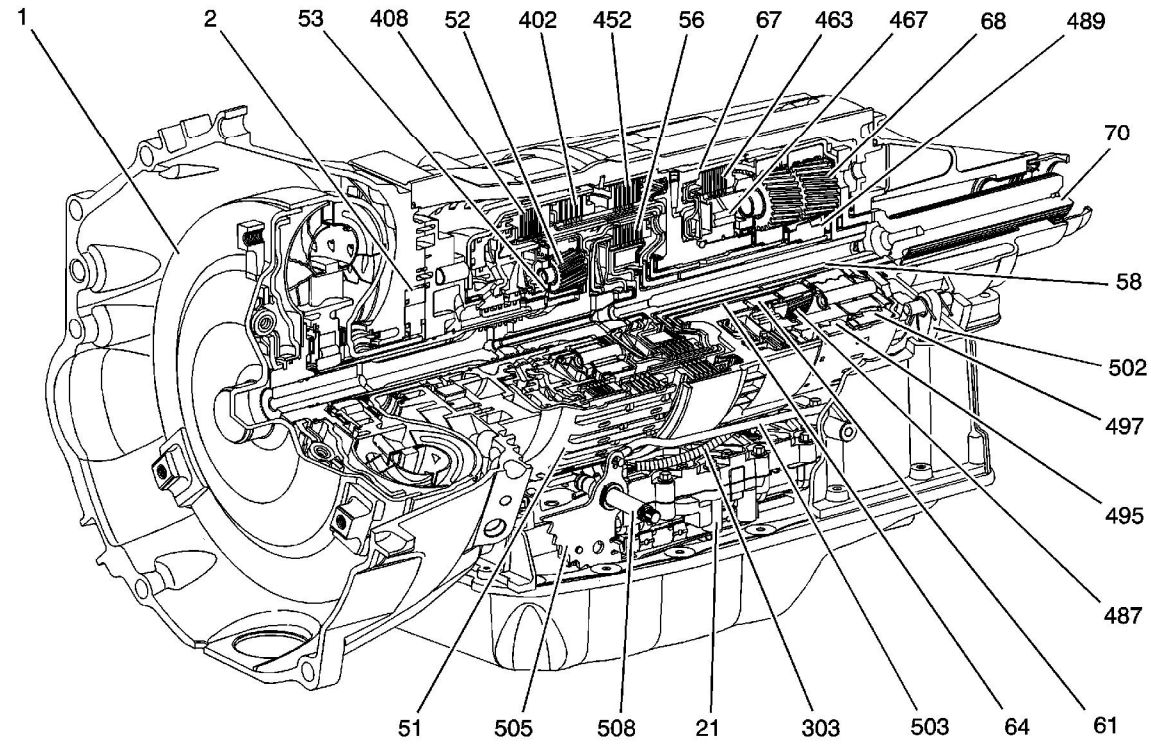

(1) Torque Converter Assembly
(2) Torque Converter (with Fluid Pump) Housing Assembly
(21) Control (with Body and Valve) Valve Assembly
(51) 1-2-3-4 and 3-5 Reverse Clutch Assembly
(52) Input Carrier Assembly
(53) Input Sun Gear
(56) 4-5-6 (w/Turbine Shaft) Clutch Assembly
(58) 4-5-6 Clutch (w/Output Carrier Shaft and Dampener) Hub Assembly
(61) 1-2-3-4 Clutch (w/Output Carrier Inner Sun Gear Shaft) Hub Assembly
(64) 2-6 and 3-5 Reverse Clutch (w/Output Carrier Outer Sun Gear Shaft) Hub Assembly
(67) Centre (w/2-6 Low and Reverse Clutch) Support Assembly
(68) Output Carrier Assembly
(70) Output Shaft Assembly
(303) A/Trans Input and Output Speed Sensor Assembly
(402) 3-5 Reverse Clutch Plate Assembly
(408) 1-2-3-4 Clutch Plate Assembly
(452) 2-6 Clutch Plate Assembly

© 2010 General Motors Corporation. All rights reserved.

(463) Low and Reverse Clutch Plate Assembly
(467) Low Clutch Sprag Assembly
(487) Output Carrier Front Sun Gear
(489) Output Carrier Rear Sun Gear
(495) Output Carrier Internal Front Gear
(497) Output Carrier Internal Rear Gear
(502) Park Pawl
(503) Park Pawl Actuator Assembly
(505) Manual Shaft Detent Lever Assembly
(508) Manual Shift Shaft

Seal Locations

Seal Locations

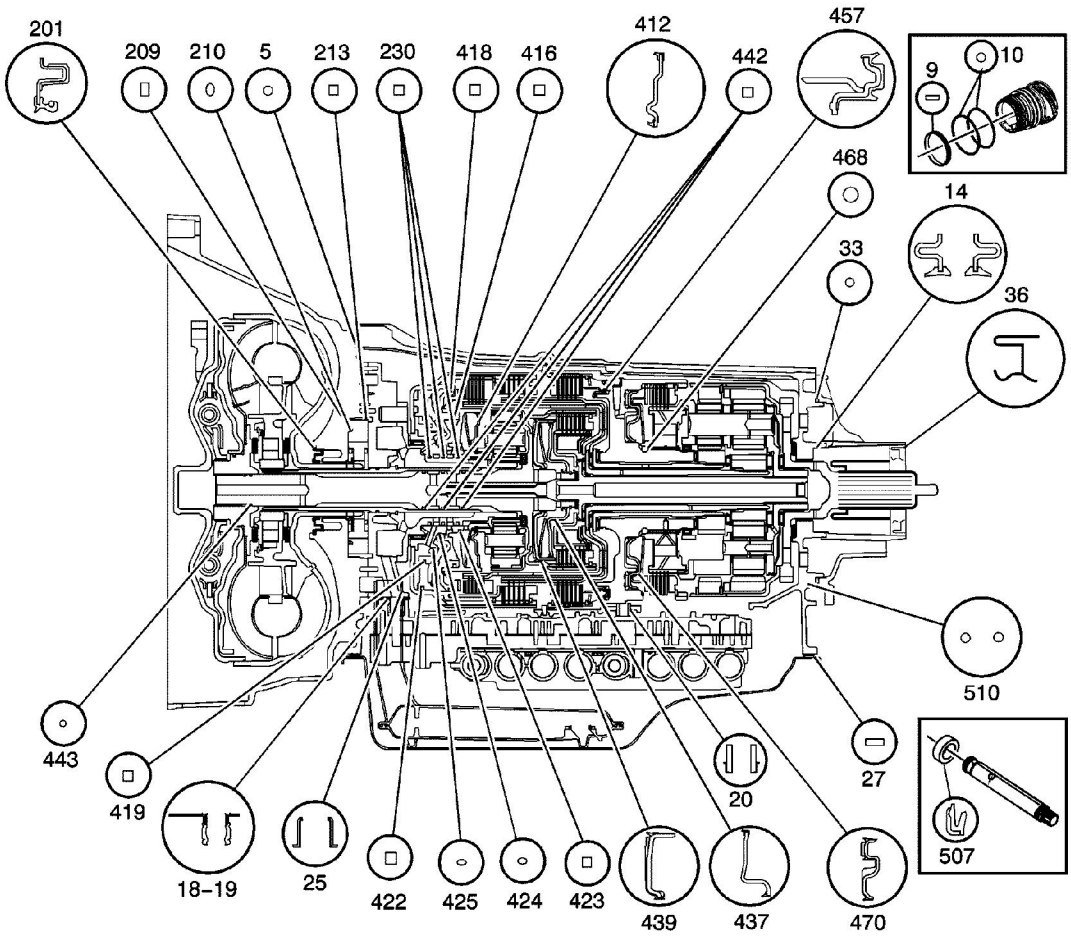

(5) A/Trans Fluid Pump Seal
(9) A/Trans Connector Seal
(10) A/Trans Connector (O-ring) Seal
(14) Output Shaft Seal Assembly
(18) A/Trans Fluid Pump Seal Assembly
(19) A/Trans Fluid Pump Seal Assembly
(20) Centre Support Fluid Passage Seal Assembly
(25) A/Trans Fluid Filter Seal Assembly
(27) A/Trans Fluid Pan Gasket
(201) Torque Converter Fluid Seal Assembly

© 2010 General Motors Corporation. All rights reserved.

(209) A/Trans Fluid Pump Slide Fluid Seal Ring
(210) A/Trans Fluid Pump Slide (O-ring) Seal
(213) A/Trans Fluid Pump Slide Seal
(230) 1-2-3-4 and 3-5 Reverse Clutch Fluid Seal Ring
(412) 1-2-3-4 Clutch Piston Dam Assembly
(416) 1-2-3-4 Clutch Piston Seal
(418) 3-5 Reverse Clutch Piston Dam (O-ring) Seal
(419) 3-5 Reverse Clutch Piston Inner Seal
(422) 3-5 Reverse Clutch Piston Outer Seal
(423) 1-2-3-4 Clutch Piston Inner Seal
(424) 1-2-3-4 Clutch Piston Housing Seal
(425) 1-2-3-4 Clutch Piston Housing Seal
(437) 4-5-6 Clutch Piston Dam Assembly
(439) 4-5-6 Clutch Piston Assembly
(442) Turbine Shaft Fluid Seal Ring
(443) Turbine Shaft (O-ring) Seal
(457) 2-6 Clutch Piston Assembly
(468) Low Clutch Sprag Seal
(470) Low and Reverse Clutch Piston Assembly
(507) Manual Shift Shaft Seal
(510) Park Pawl Actuator Guide (O-ring) Seal